The DXF converter reads the 3DFACE lines found in some 3D DXF files and attempts to create a Fire Dynamics Simulator (FDS) data file.

Column 1 – A list of the CAD layers in the DXF file. Each layer will be defined as a SURF in the FDS file.


Column 2 – Defines if layer should be converted

Column 3 – Defines SURF\_ID for layer. Dropdown contains material list from FDS database.

Column 4 – Defines the appearance for the CAD view.

Column 5 – Shows the color for the appearance in column 4

Column 5 – Shows the texture map for the appearance in column 4

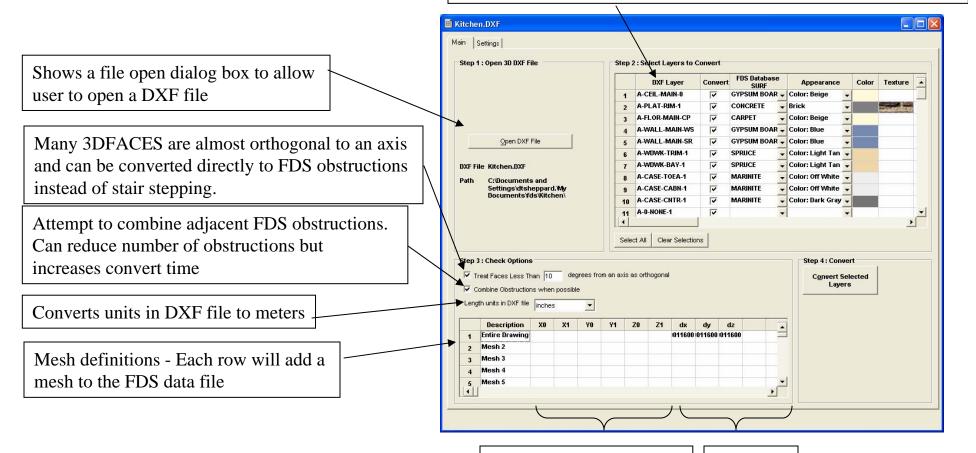

Defines extents of mesh. The default is the extents of the DXF file. Grid size in meters

